
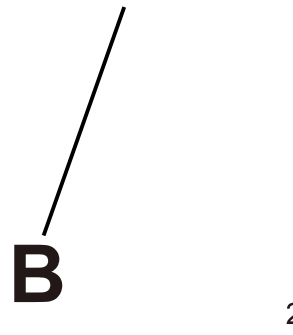
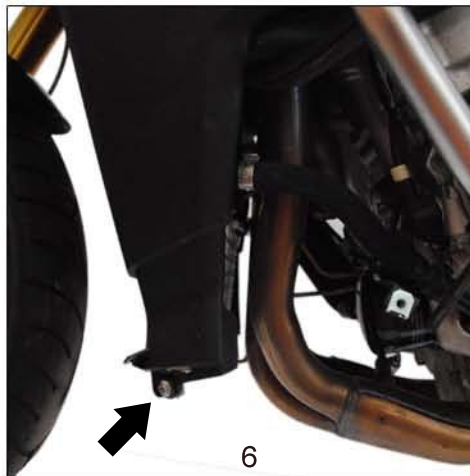
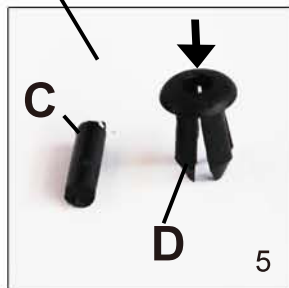
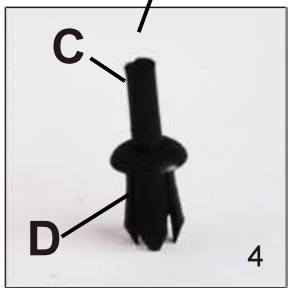
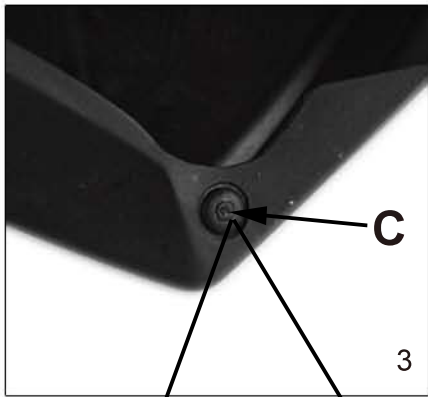


Fitting instructions BMW S 1000 XR
Oil and water cooler grill protection SP7520

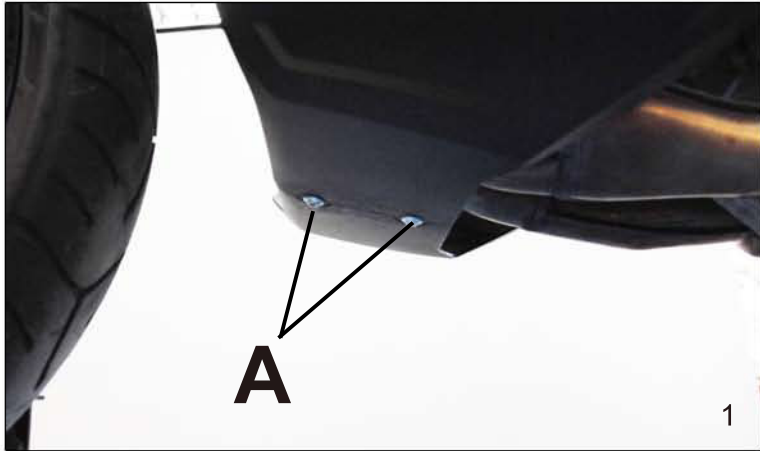


Remove the belly pan. To do so, remove the screws (A and B) as shown in the figure 1.

Remove the 3 plastic rivets which fit the belly pan (fig.3). Pull the pin with the small screwdriver until it is completely entered. Now remove the rivet from the belly pan.

Install the pin again to the rivets in order to re-fit the rivets to the belly pan after the installation of the protectors is completed.(fig.4 -fig.5)

Fitting instructions BMW S1000XR

Water cooler protector SP7521

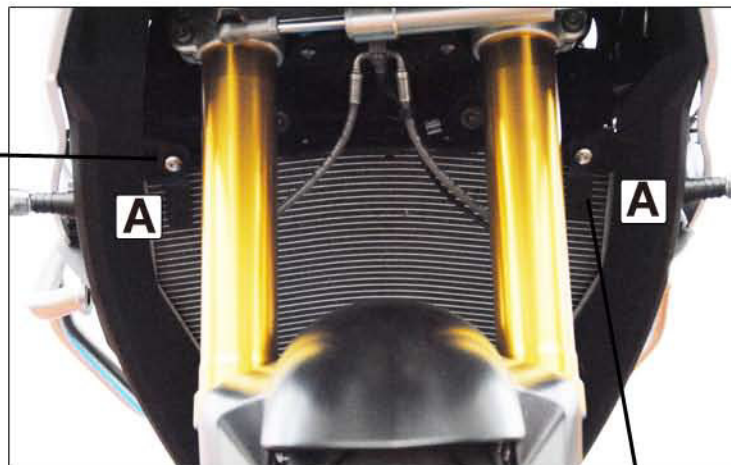


Svitate le viti originali che fissano la carena al telaio.
Inserite la staffa A e fissatela con la vite originale
senza stringere.


Remove the original screws which fix the fairing to the
frame. Insert the bracket A and re-fit the fairing without
tighten the screws



Oil cooler protector SP7522

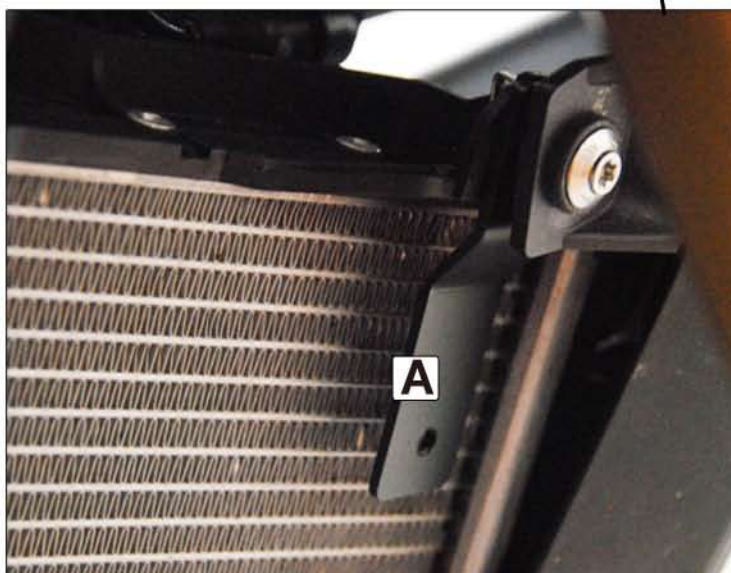

Fitting Instructions BMW S 1000 XR
Oil and water cooler grill SP7520


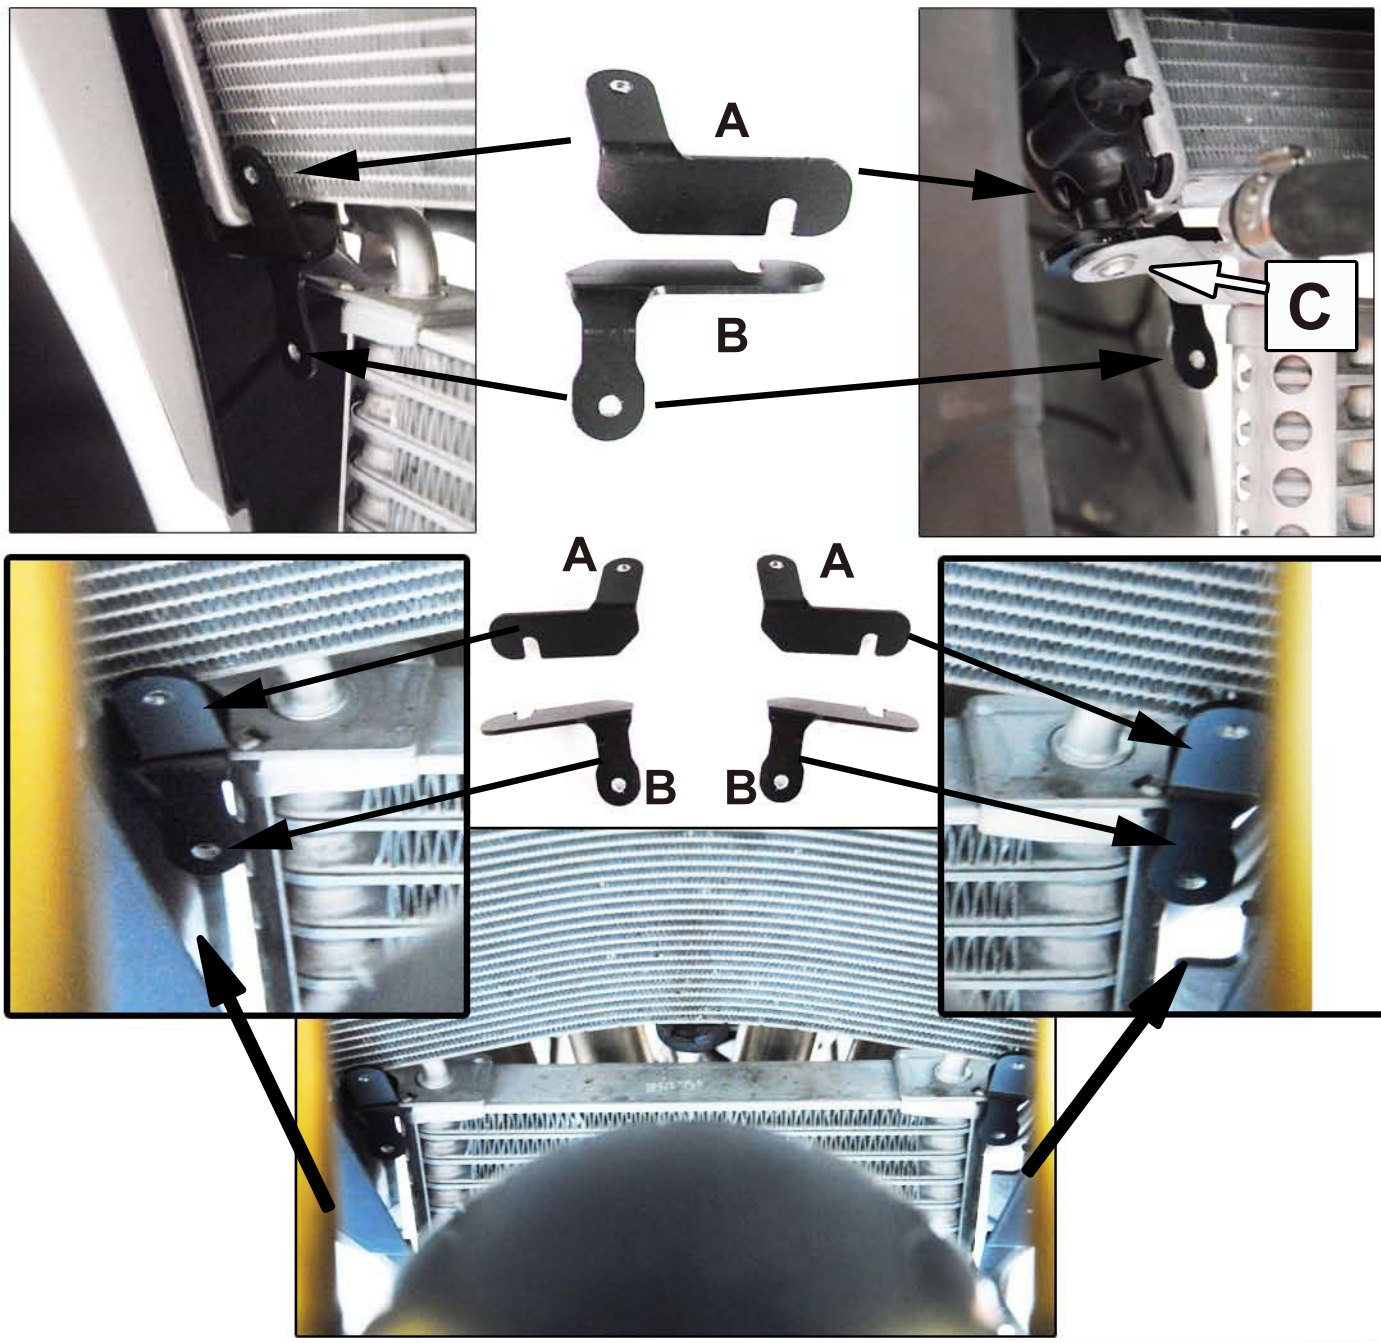


Install the brackets with the screws which hold the oil cooler (point C in the figure).

The bracket **A** has to show towards the water cooler (installation point for the water cooler protector)
The bracket **B** has to show downwards (installation point for the oil cooler protection).

Use the screw **C** to install both brackets together.

Fitting instructions BMW S 1000 XR
Oil and water cooler protection SP7520

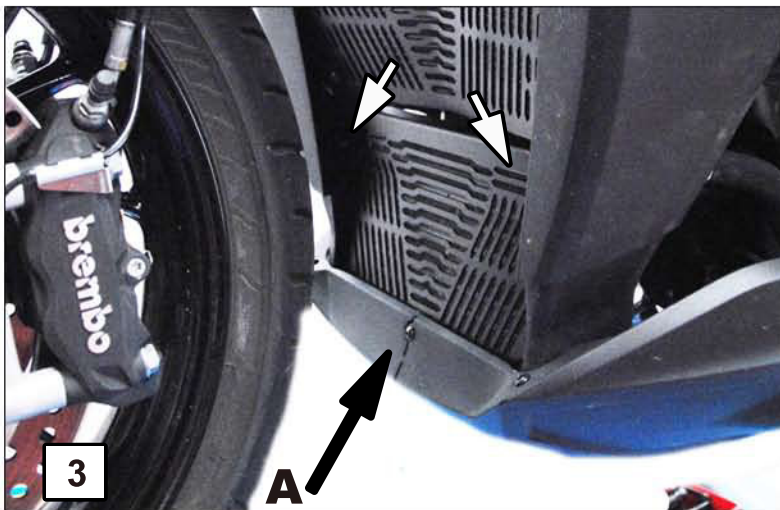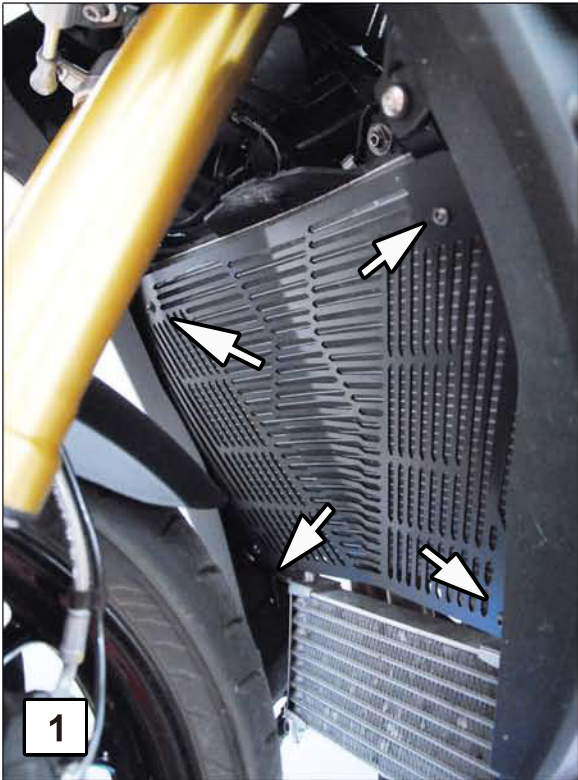

Install the water cooler protector using the M5x12 screws to the vehicle (the mounting points are shown in figure 1).

Install the oil cooler protector using the M5x12 screws to the vehicle (the mounting points are shown in figure 2).

At the lower point (belly pan) use the M5x20 screw as shown in figure 3 (point **A**).

Tighten all screws